

## Convert 1271-01 --> 1270-01

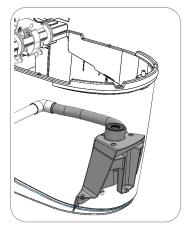


1. Open the lid and have necessary tools ready


Screwdriver torx T25

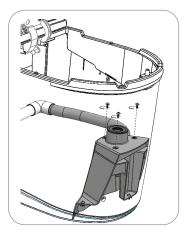


2. Loosen the three screws

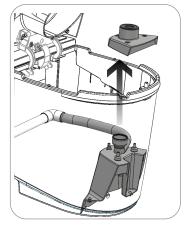


3. Remove fixing block and gasket

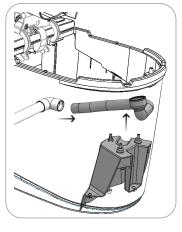


**4.** Loosen urine hose from connection




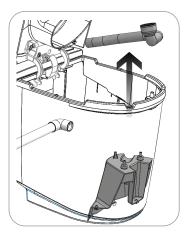


**5.** Remove the internal urine hose

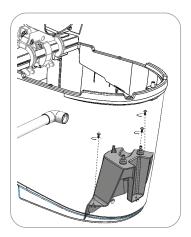

**6.** Loosen the three screws that keep the assembly base in position

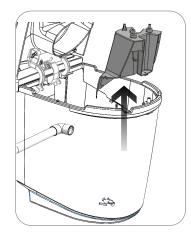


7. Remove assembly base

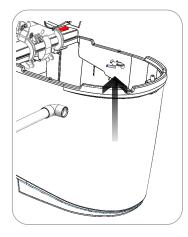


8. Remove magnet holder

*If the toilet is connected to power, the* red light goes on

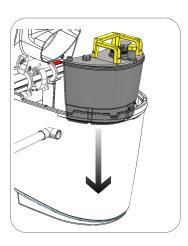

**10.** Place the urine tank

When the urine tank is placed in correct position, the red light will go out

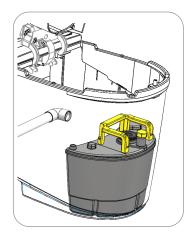

**10.** Ready to use



